

MAKE IT WORK FOR YOU

EasyWeld Station

Build a safer, production-ready welding cell.

Five options for your EasyWeld Station.



Make it work for you.

5 OPTIONS



01 Replacement laser welding safety window Uwex

EN 207 full protection; EN 60825 6 ±0,3 for CO2
W x H: 297 x 210

LWS-1001



02 Angle for EasyDesk and ProFeeder 30 degrees

30 degrees angle

ER-Angle-30



03 Angle for EasyDesk and ProFeeder 45 degrees

45 degrees angle

ER-Angle-45



04 Yellow Scanner cover

Cover for laser scanner

SC-1000



RAL

05 Custom RAL code

RAL Code XXXXX

RAL-XXXX

Adapter Plates: Please refer to the separate Adapter Overview to find the appropriate adapter plate for the specific robot being used. [Click here](#)

Window shown installed in the reference cell. The supplied angle images are identical and illustrative. Custom RAL colour swatches are illustrative.

Configure your EasyWeld Station.

Choose your safety window, mounting angles, scanner cover and colour.

easyrobotics.biz

info@easyrobotics.dk